

**microair**  
**INSTALLATION &  
OPERATION  
MANUAL**



**UnicornHygienics**

# MICROAIR INSTALLATION

## 1. Installation kit

### Included

- Complete air freshener dispenser
- Installation screws and wall plugs (2 each)
- Lock Plate and Unicorn Key
- Window and logo card (which should normally be already fitted on the cover)

### Not included

- Batteries (2 x 1.5V 'C' Cells) • Aerosol can

## 2. Fitting and removing the logo window

If for some reason the logo window and the logo label come separately or you wish to change the label inside, you can easily change it and fit a new label.

- **Fitting the logo window onto the cover:** place the logo card on the cover and make sure the card is in a straight position. Then, pop the window onto the cover until you hear a clicking noise.



Picture 1

- **Removing the window logo:** by opening the cover you will see part of the window logo coming out from the nozzle hole (Picture 1). Push this part out in order to remove the window from the other side of the cover.



Picture 2

## 3. Fitting the Lock Plate


Lock Plate can be fitted in two different position. Teeth forwards (Picture 2) means that the cover can only be opened by using Unicorn Key. Teeth towards the back (Picture 3) clicks shut and clicks open without a key. If no Lock Plate is fitted, unit freely opens and closes.



Picture 3

## 4. Fitting the Dispenser to the Wall

The Microair can be fitted to the wall using the screws and Wall plugs provided or optionally using glue or double sided sticky tape. If using wall plugs (Picture 4), drill 2 x 6mm holes. Use the back of the dispenser to mark the position of the holes first. The built in spirit level can be used to ensure the dispenser is exactly upright.

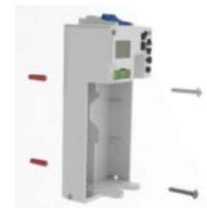

Picture 4

## 5. Fitting/Replacing batteries

The dispenser requires 2 x 1.5V 'C' Cell batteries. The batteries are located as shown (Picture 5). All programmed information will be retained by the dispenser while batteries are being replaced.



Picture 5

## 6. Inserting/ Removing the Aerosol can

The empty aerosol can be easily removed from the dispenser. Make sure the nozzle on the new can is straight and pointing towards the front. Once the can has been replaced press the reset button to restart the timer. The display will show the message **FULL** (Picture 7), which needs to be acknowledged with the OK button. ✓



Picture 6



Picture 7

# MICROAIR OPERATION

- Menu
- Test
- OK
- Lower
- Higher
- Reset



## Functions:

**Reset the system after changing the refill:** Press Reset button. ○  
In the display "FULL" will appear which needs to be acknowledged with the OK button. ✓


 

**DOZE:** Press the OK Button ✓ and Test button ☞ together. Sprays are suppressed but timer continues to function. Press the buttons again to activate the dispenser.

**Lock the dispenser:** By pressing the Higher and Lower buttons ▲▼ together for 1 second, the program can not be tampered but it will continue function normally. To unlock the dispenser press the buttons again. ▲▼


 
 

**TEST SPRAY:** Press the test ☞ button to spray the timer will count down from 5 seconds. The test spray does not disturb the set program. Holding the test button will result in multiple sprays. CAUTION – Hold dispenser away from face when making the test spray.


## 7. Programming


1) Press the Menu Button 

2) **Set the current day :**  
using the Higher and Lower   buttons. Confirm using the OK  button.



 3) **Set the current time:**  
First change the hours using the Higher and Lower   buttons, press OK  button to confirm. Then you will be able to change the minutes, so use again the Higher and Lower buttons. Press OK  when finished.

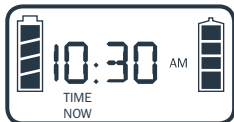

4) **Choose the frequency:**  
The dispenser can operate using one of the 3 different default programs (**see 5.1**) . Select either default program 1,2 or 3 and confirm using the OK  button. Alternatively select 'SET' for Customer Programming (**see 5.2**).




 



 

 
Once programming is complete, the display will sequentially list the current time, current day, and program start and end times. It will display a countdown to the next spray. Outside of service period the display will show the current time.


## 7.1 Default program options:



- (a) **Default program n° 1:**  
Operates between 08.00 to 18.00, Monday to Friday for 30 days.
- (b) **Default program n° 2:**  
Operates for 24 hours a day, Sunday to Saturday for 30 days.
- (c) **Default program n° 3:**  
Operates between 08.00 to 18.00, Monday to Saturday for 60 days.

## 7.2 Customer Programming:

- 1) To set your own parameters choose **SET** option from the menu after having introduced the current time and day.
- 2) Next choose the period program using   buttons. You can select either 30, 60 or 90 days, confirm using OK button. 
- 3) Set the Start Time using   Change the hours first, confirm using OK button, then set the minutes and confirm using OK button. 
- 4) Set the Stop Time using the same sequence as before.
- 5) Adjust the Days On using   buttons and confirm with OK button.

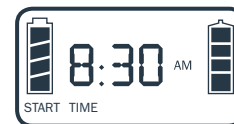

**The dispenser is now programmed with your own settings.**



### Unicorn Hygienics Limited

5 Ferguson Drive, Knockmore Hill Industrial Park,  
Lisburn, BT28 2EX, Northern Ireland, UK

**Tel:** +44 (0) 28 9264 0827

**Fax:** +44 (0) 28 9264 0830

**Email:** info@unicorn-hygienics.com

**Web:** www.unicorn-hygienics.com